

d°light

Save these for future references. If you have any questions, please call 1.720.879.7878 or e-mail: customer.service@dianalindesign.com website: www.dianalindesign.com




ATTENTION! WHEN USE WITH CHARGER

IMPORTANT WARNING

This device is for charging rechargeable Ni-Cd/Ni-MH batteries ONLY !
Inserting any other batteries may damage the device, destroy the batteries and cause injury to the user

RECHARGEABLE AA BATTERY (4)

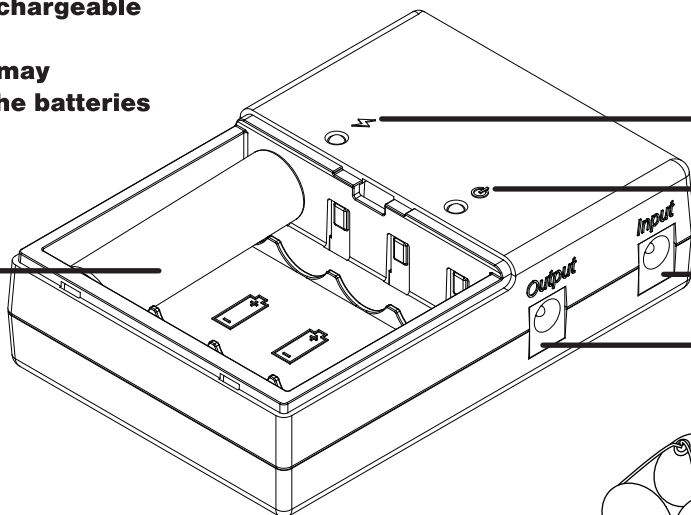

CHARGE LIGHT

POWER LIGHT

INPUT

OUTPUT

TURN OFF d°light WHEN CHARGING

Charge Light: Red light = charging

Green light = fully charged

Power Light: Green light = power on

Input: Plug in AC adapter

Output: Plug in LED silicone bubbles

Contents Charger unit, 5V/1A AC adapter

Input DC 5V/1A . **Output** **Approx.** 500 mA

Charging Mode Negative Delta V with Constant Current

Charging Time Approx. 300 minutes for 2300 mAh Ni-MH AA

batteries and approx. 330 minutes for 2500 mAh Ni-MH AA batteries .


Features

1. Safely charges any brand of rechargeable AA Ni-Cd/Ni-MH batteries.
2. Featured with Bi-color LED to indicate charge & fully charged status precisely.
3. Built with Over Voltage, Short Circuit Protection and Back-up Timer for total charge-safety.


Dimensions : 104.5 mm (L) x 70.6 mm (W) x28.2 mm (H)

IMPORTANT NOTES

1. Batteries will self discharge when not in use. It is recommended that you do not let the batteries sit idle for more than two months without recharging.
2. Batteries will get warm during charging. This is normal.
3. Keep the battery terminals clean.
4. Always insert the batteries in the battery box in the correct direction.
5. Please be sure the 4 batteries are charged together (with series connection) and are with the same brand, size and capacity rating. The battery box may not work properly if the users fail to follow above instructions.
6. If the batteries are getting much shorter operating time after being fully charged, the batteries may have been worn out and about to reach the end of their service life. Please buy the new ones to replace them.

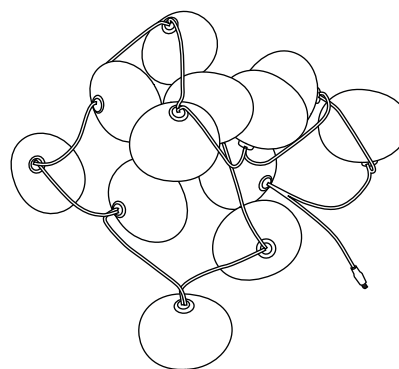

LED Silicone Bubbles

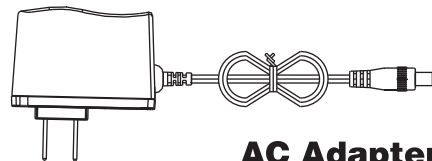

AC Adapter

CAUTIONS

1. Always unplug the AC adapter when not in use.
2. Do not use, place or store the charger where it may come into contact with water or moisture.
3. Always replace frayed or damaged wire and broken plugs immediately.
4. Always unplug the battery box from the power source before cleaning.
5. Do not short-circuit the metal contacts of the charger.
6. Do not disassemble, deform or reconstruct any part of the unit.
7. Use this battery box with the AC adapter included in the package only.

